## Broadband-Hamnet™ HSMM-MESH™

BBHN

How to


## What Will Be Done In This Seminar

- ☐ Cover The Very Basics Of Mesh
- □ Demonstrate How To Flash A Node
- ☐ Demonstrate VoIP Call
- ☐ Demonstrate Sending Email

- □ What is Broadband-Hamnet (BBHN)
  □ Self Discover
  □ Each Node Passes Traffic Anonymously
  □ Based On Open Source
- □ Where can I find out more http://www.broadband-hamnet.org/
- □ Where can I buy equipment http://www.wlanparts.com/category/wlan.ubiquiti/



☐ YouTube on Flash Process☐ Make Sure Your WiFi Is OffYouTube Ubiquiti Flash Process

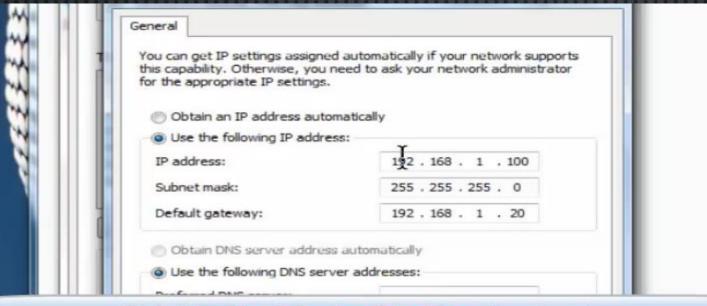

Click "Use the following IP address" and enter: IP address 192.168.1.100 and Default gateway 192.168.1.20

## ☐ Ubiquity System Password

channels, output power, and Dynamic Frequency Selection (DFS) requirements. The End User is responsible for keeping the unit working according to these rules. For further information, please visit www.ubnt.com.

Log in with User: ubnt and Password: ubnt, and select your country.

☐ BBHN System Password

root hsmm ☐ <u>MESH Node Locations</u>

